

5. Abmessungen / Dimensions P52/30-500MS

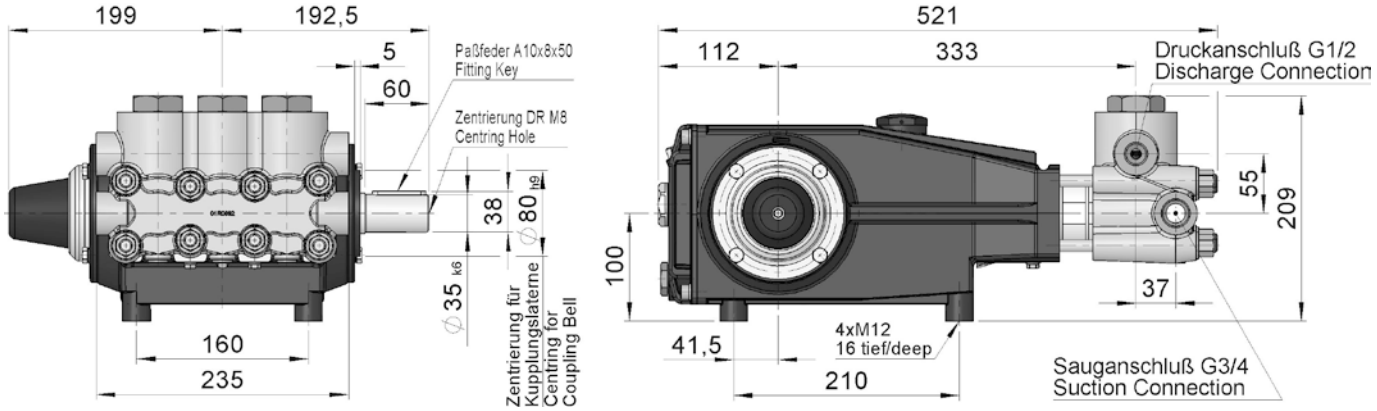

5. Abmessungen / Dimensions P52/30-500

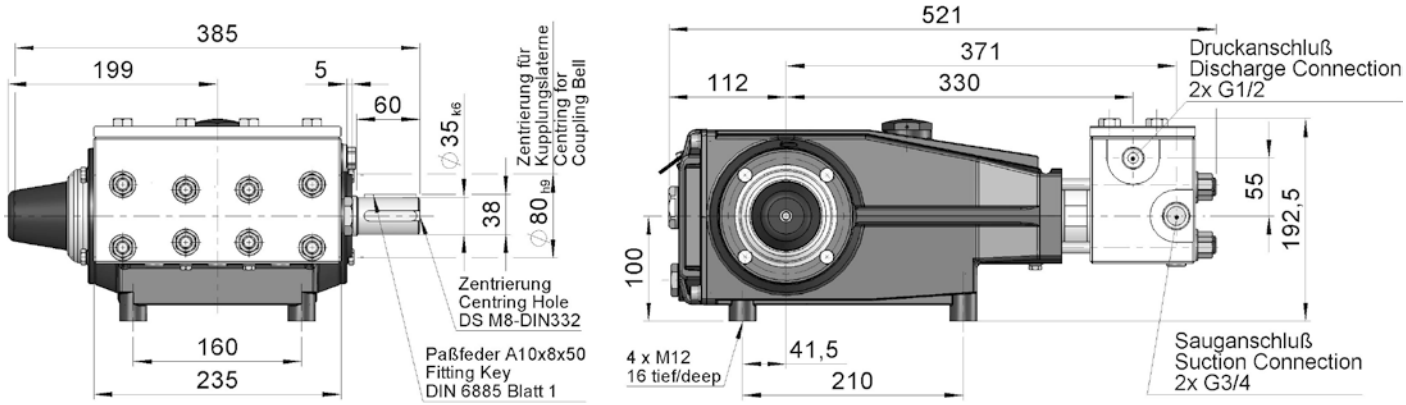

6. Installation / Inbetriebnahme

6.1 Wellenschutz

Beim Betrieb der Pumpe muss das freie Wellenende durch den Wellenschutz (21), die angetriebene Wellenseite und Kupplung durch einen bauseitigen Berührungsschutz abgedeckt sein.
Zur Montage des Wellenschutzes am freien Wellenende der Kurbelwelle den Wellenschutz (21) zusammen mit dem Wellenschutzhalter (21A) mit den Lagerdeckelschrauben (17) am Lagerdeckel (14) befestigen.

6.2 Drehrichtung der Pumpe

Die Drehrichtung der Antriebseinheit gemäß dem Drehrichtungspfeil auf dem Antriebsgehäuse einstellen.

6.3 Saugleitung Filter

Empfohlene Maschenweite 150 µm.

7. Betrieb

Angaben siehe Montageanleitung
SPECK-TRIPLEX-PLUNGERPUMPEN

6. Installation/ Putting into Operation

6.1 Shaft protector

When the pump is in operation, the open shaft end must be covered up by shaft protector (21), the driven shaft side and coupling by a contact-protector.

To cover the exposed crankshaft end, mount the shaft guard (21) together with the holder (21A) onto the bearing cover (14) and secure with bearing cover screws (17).

6.2 Direction of pump rotation

Set the direction of rotation of the drive unit according to the direction of rotation arrow on the crankcase.

6.3 Suction line filter

Recommended mesh size 150 µm.

7. Operation

For informations, see assembly instructions
SPECK-TRIPLEX-PLUNGER PUMPS